NAVIGATOR User's Manual

Thank you for choosing the Navigator. To make sure you use it correctly and for the care of your scale, please read this manual carefully first.

Summary

The Navigator features and construction make it a great choice for suspending items to weigh and highly recommended for travelers. With the luggage fees passed on from popular travel methods, it's important to weigh first before you pay later.

Install battery

Open the battery cover at the back of scale, put 2pcs AAA batteries into the scale, paying attention to the battery polarity, then close the cover.

Power on

Hang the scale upright, press " \bigcup /T" key to power on, 2 seconds after the scale will show HELLO, it will show 0g, then you are ready to weigh.

Tare function

When you use a container, you should hang the container to the strap first, press " \bigcup /T" key to reset 0g, and then put the goods into the container, to get the net weight of the goods.

Weighing steps

Power on the scale, hang the goods at the strap and the data will be shown. When the goods are stable, the data will be locked, and the LCD will display HOLD. Remove your luggage/goods and read the accurate weight on the screen. Once you press the " \cup /T" key, the data will unlock, and you can add goods to weigh again. During weighing, the total weight of goods (include container) can't be over the max capacity. Once the total weight is over the max capacity, the scale will show "Err". You should remove the goods promptly to avoid damaging the scale.

Unit Exchange

Press "UNIT" key to choose g, kg, lb, oz. (1kg=2.2lb=35.27oz=1000g)

Power off

The scale will auto power off in 30 seconds after you finished weighing.

If you want to turn off the scale manually, you can press " $^{(\buildrel)}$ T" for 2 seconds, and the scale will power off.

Important Tips

- 1. Keep scale upright while powering ON.
- 2. Grasp the handle to weigh. Try to keep the scale horizontal to achieve an accurate weight.
- 3. Handle the scale with care.
- 4. Do not use chemical detergent for cleaning, soft silk is recommended.
- 5. When the display show "", it indicates the batteries need to be replaced. If you intend to not use the scale for a long time, take out the batteries to avoid leaking and damaging the circuit.
- 6. If there are any problems, contact OHS or your local dealer for assistance. Do not attempt to disassemble the scale which will void the warranty.