Tare Function

The tare function allows you to weigh another item consecutively after weighing the first item without removing it from the scale.



Gently Press the"(!)IT" to turn on the scale.



The Scale LCD display will show its start routine of segment as it powers on.



Wait until the "O" is shown on the display. Put the container on the scale platform.



The LCD display will show the steady weight of the container.



Press the"(!)IT" to clear the weight of the container (reset to zero).



Thetop -left corner will show icon "TARE", it means the Tare function is activated.



Add the ingredients into the container.





The LCD will show the weight of the ingredients only. RepeatPressing the"(!)IT" to weight new different ingredients.

Negative Value

The display will show a negative value (see LCD functions) if a weight has been removed from the scale. Please touch the "(!)JI" to clear the negative value. the display will show "O" again.

Error Indication



Err

The" Err" symbol on display indicates that the scale is over-loaded. Please remove excessive load immediately to avoid possible damage to the product.

Care and Maintenance



Place the scale on a solid level surface before use. Avoid hitting or dropping the scale otherwise damage may occur.

Do not overload the scale or put heavy things on the scale when not use.



Treat the scale with care as it is a highly precise electronic instrument.

Do not immerse this product in water or any other liquid. Please keep drv surface.

Clean the scale with a soft damp cloth, do not use chemicals or harsh abrasives.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



Optima Home Scales NEPTUNE **Electronic Kitchen Scale** Instruction Manual



KG690


Product Specification

Product size	240x180x16mm	
Power	3.7V rechargeable lithium battery	
Display	LCD readout display	
Max Capacity	10kg/22lb,10000ml/352fl'oz	
Division	1g/0.1oz 1ml/0.1fl'oz	

Product Feature

- Equipped with four precision strain gauge sensors system
- Press on / Auto off / Manual off
- Tare function
- Two weight units :g-lb:oz
- Two volume units: ml-fl'oz
- Low battery/ over-load indication
- . USB rechargeable lithium battery
- . Length of USB cable:80cm

Product Structure

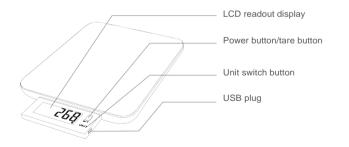

LCD Display Functions



lb:oz: weight unit fl'oz: volume unit ml: volume unit

Popup LCD display I

Press the hidden LCD part to pop out the LCD display



To Charge the Battery

1. Connect the USB cable and the scale plug to charge for 2 hours



2. The LCD screen will show "__ _ " when the scale is charging. If full "____" means the scale is fully charged.




Button	Fun	ictio	ns
--------	-----	-------	----

Press on / Manual off / Zero / Tare ሆ/T Unit Conversion: g-lb:oz, ml-fl'oz UNIT

Unit Conversion

If the scale is with unit systems of Metric(g,ml) and Imperial(lb:oz,fl'oz), users can select units from g to lb:oz or ml to fl'oz.

While the scale is on, select the required unit by repeatedly touching the "UNIT" button until the desired unit is shown, g/lb:oz or ml/fl'oz.

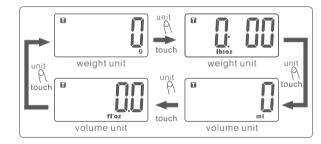













Operation

Before use, place the scale on a solid, level surface. Place any container or bowl (if used) on the scale before operation .

Gently Press the "U/T" to turn on the scale.

-88888 lb:oz fl'oz ml

The Scale LCD display will show its start routine of segment as it powers on.



Wait unitl the "0" is shown on the display.



Place the item to be weighed on the scale (or in the bowl if required). The LCD will show the weight reading.

After weighing touch the "U/T" button to turn off the sale. Or leave the scale and it will automatically power off in 2 minutes.