 


# User Manual

Kitchen Scale GALAXY

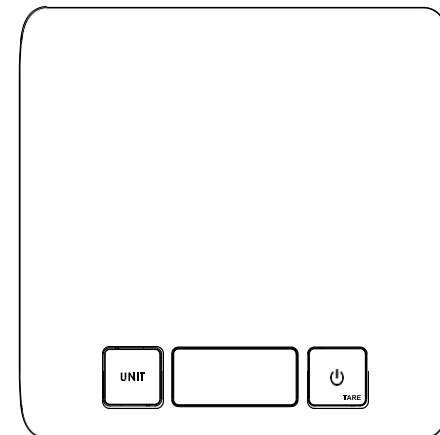

**OPTIMA HOME SCALES**

PO BOX 1526 CUMMING GA 30028 UNITED STATES

TEL:888-688-4833 [www.optimahomescales.com](http://www.optimahomescales.com)







- Thank you very much for selecting the OHS Kitchen Scale GALAXY.
- Please read the user manual carefully and thoroughly to ensure the safe usage of this product and keep the manual for further reference in case you have problems.

## Table of Contents

<b>Symbol Meaning</b>	
Symbol Meaning .....	2
<b>Overview</b>	
Device Components .....	3
Function Indication .....	3
LCD Display.....	4
<b>Initial Start-Up</b>	
Insert the Batteries.....	5
Changing the Weight Unit .....	6
<b>Daily Measurement</b>	
Daily Measurement .....	7
Measuring with Tare Function.....	8-9
<b>Troubleshooting</b> .....	10
<b>Specifications</b> .....	11
<b>Maintenance</b> .....	11
<b>Warranty</b> .....	12
<b>FCC Regulations</b> .....	13

♥ Symbol Meaning


The warning signs and symbols are essential to ensure your correct and safe use of this product and protect you and others from injury. Please kindly find the meanings of the warning signs and symbols, which you may encounter in the label and user manual, as follows:

	Symbol for "THE OPERATION GUIDE MUST BE READ"		Symbol for "COMPLIES WITH EU REQUIREMENTS"
	Symbol for "DIRECT CURRENT"		Symbol for "ENVIRONMENT PROTECTION – Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice"
	Symbol for "MANUFACTURER"		



♥ Care

- Please do not put the scale on carpet or unlevel surface.
- Please put the weight object in the center of the scale platform to obtain a more accurate weight.
- Please do not put items on platform when switch on.
- If the scale is not to be used for a long period, please remove the batteries.
- Clean the scale with a slightly damp cloth, DO NOT immerse the scale in water or use chemical/abrasive cleaning agents.
- Do not leave the scale in a damp environment.

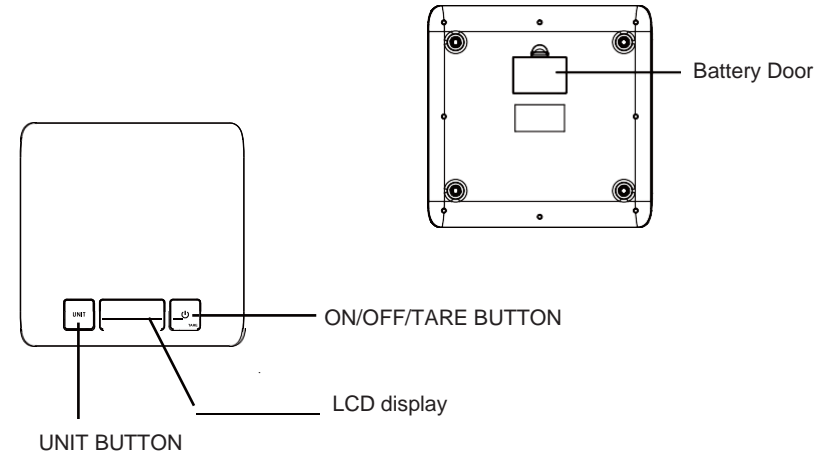♥ Device Components




♥ Function Indication

-  Press ON/OFF/TARE button to switch on.  
Press ON/OFF/TARE button to clear weight on the platform.  
Press ON/OFF/TARE button for 2s to turn off.
-  Press UNIT button to select your desired weight unit.

♥ List

1. Kitchen Scale GALAXY
2. 2xCR2032 batteries (3V per each)
3. User Manual


♥ LCD Display

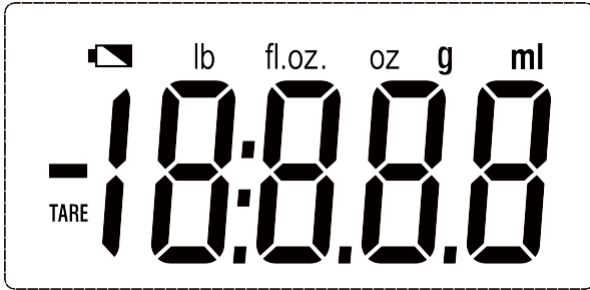

TARE	Tare Function	lb oz	Weight Unit (Pound)
ml	Volume Unit (Milliliter)	g	Weight Unit (Gram)
fl.oz.	Volume Unit (Ounce)	—	Negative value

♥ Insert the Batteries

- Open the battery door in the back of the scale.
- Insert the batteries (2x CR2032) into the battery compartment according to the polarity indications marked inside the compartment.
- Close the battery door.  
The LCD displays as below:

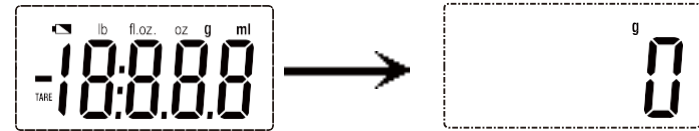


 CAUTION

- When the symbol "Lo" appears, the device will power off soon. Then you shall replace with a new set of batteries. Please replace both two batteries at the same time. Do not mix the old batteries with the new one.
- Worn batteries are hazardous waste. Do NOT dispose of them together with the household garbage. Please refer to the local ordinances and recycling instructions regarding disposal of the worn batteries.
- In order to achieve the best performance and protect your monitor, please use the authorized/specified batteries.

## ♥ Changing the Weight Unit

 In weighing mode, press the UNIT button to select your desired unit (g, fl.oz.,lb:oz., ml). The units will be displayed in the LCD display. (The default unit is g)

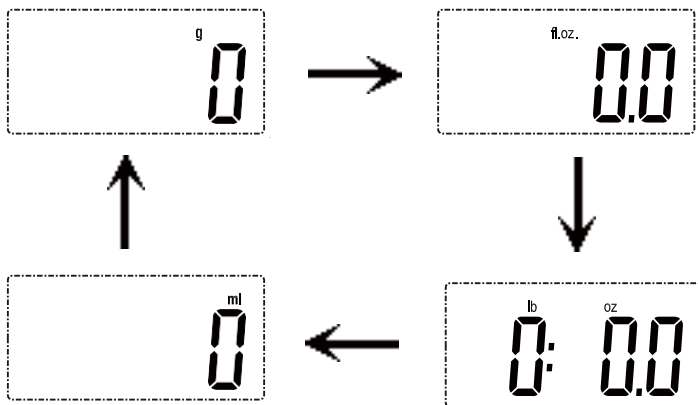


### ⚠ CAUTION

When finishing the unit selection, you may start to weigh according to the weighing procedure below. If there is not any operation and the weight is steady in weighing mode, the scale will turn off automatically after about 1 minute. Or you can press and hold the ON/OFF/TARE button for about 2s to turn off it.

## ♥ Daily Measurement

1. Place the scale on a solid surface and ensure that it is level.
2. Do not put anything on the scale.
3. Press the ON/OFF/TARE button lightly to enter the weighing mode.
4. You can start to weigh when "0" is shown on the LCD.

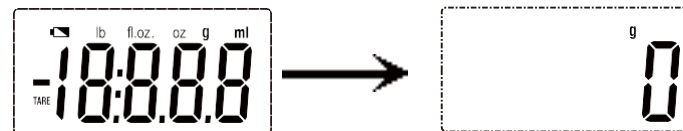

5. Put the things in the middle of the scale, the weight data will be shown.




### ⚠ CAUTION

If there is no operation, the scale will turn off automatically in about 1 minute. Or you can press and hold the ON/OFF/TARE button for about 2s to turn off.

## ♥ Measuring with Tare Function

1. When the scale is off, press the ON/OFF/TARE button to enter the weighing mode. You can start to weigh when "0" is shown on the LCD.

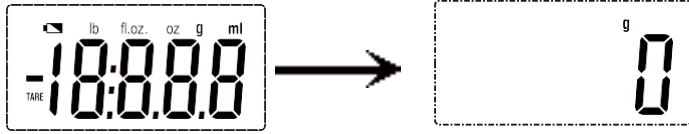

2. Put the container on the scale, then put the things in the container, the weight data will be shown.



3. Press the ON/OFF/TARE button, the LCD will display "0".



## ⚠ CAUTION

When the weight is less than 600g, press the ON/OFF/TARE button, the icon "Tare" won't appear.

4. Now add another item to weigh onto the scale. The LCD will show the weight of the newly added item.



5. If you remove the item added to the scale, the LCD will again show zero. But if you remove all items from the scale, the LCD will show a negative value indicated by a minus sign.



6. When it shows the negative value, press the ON/OFF/TARE button again, it will clear to zero, and the "TARE" icon will disappear.



7. If there is no operation, the scale will turn off automatically in about 1 minute. Or you can press and hold the ON/OFF/TARE button for 2 seconds to turn off the scale.

♥ Troubleshooting

Problem	Root Cause	Solution
The LCD display is dim or displays Lo	The power is not enough.	Please replace with 2xCR2032 new batteries.
The device isn't on when you press the start button.	The batteries are exhaust.	Please replace with 2 x CR2032 new batteries.
	The batteries are not inserted correctly.	Please insert the batteries according to the indication correctly.
The LCD displays <b>EEEE</b>	Overload.	Please remove the weight on the scale to protect the loadcells. Suggest buy a new scale with higher weight range.
The LCD displays <b>0.0t</b>	Before you turn on the scale, there are some things on the scale which are 1000±50g.	Remove the things from the scale, wait until it displays zero, then you can start weighing.
The measurement is not accurate/ LCD display <b>u n 5 t</b> .	The weight is unstable when you turn on the scale.	Keep the weight stable when you turn on the scale.

♥ Specifications

<b>Product Name</b>	Kitchen Scale (SKS-1009-B)
<b>Dimension</b>	Whole size: 200x200x14mm (Approximately)
<b>Net Weight</b>	Approximately 470g
<b>Display</b>	LCD
<b>Measurement Unit</b>	g/ fl:oz / lb:oz / ml
<b>Measurement Range</b>	5000 g/176.4 fl:oz /11 lb:0.4 oz/5000 ml
<b>Minimal Weight</b>	2g
<b>Division</b>	1g / 0.1 fl:oz /0.1 oz / 1 ml
<b>Accuracy</b>	F.S*3‰+1d
<b>Working Environment</b>	Temperature: 5°C to 40°C Relative Humidity: ≤90% RH Atmospheric pressure: 86kPa to 106kPa
<b>Storage Environment</b>	Temperature: -20°C to 60°C Relative Humidity: ≤90% RH Atmospheric pressure: 50kPa to 106kPa
<b>Power Source</b>	6V (2xCR2032 batteries)
<b>Auto-Off</b>	About 1 minute after clearing, or about 1 minute after the weight is stable.
<b>Accessories</b>	1. 2x CR2032 batteries 2. User Manual
<b>Mode of Operation</b>	Continuous Operation

About the Accuracy of This Product

This product passes strict inspection before delivery and therefore its accuracy is guaranteed by the manufacturer. Please refer to the above table for the descriptions on accuracy.  
**WARNING: No modification of this equipment is allowed.**

## ♥ Maintenance

When carrying out usual maintenance, please ensure practice of the following Do's and Don'ts:

- DO use a dry soft cloth to wipe the dust.
- DO use a wet soft cloth, dipped into water and wrung out, to wipe the dirt. Then use a dry soft cloth to dry up the device.
- DON'T wash the device with water or immerse it in water.
- DON'T use propellant, abrasive or other chemicals to wipe the dirt in avoidance of discolor or malfunction.
- DON'T disassemble this device. If you have any problems, please contact OHS.  
(Please refer to [Warranty](#) for contact information)

## ♥ Warranty

- OHS warrants its products free of defects in materials and workmanship in normal use for a period of TEN years from the date of retail purchase.
- This warranty does NOT cover damages caused by misuse or abuse, including but not limited to:
  - Failure caused by unauthorized repairs or modifications;
  - Damage caused by shock or drop during transportation;
  - Failure caused by improper operation inconsistent with the instructions stated in this user manual;
  - Malfunction or damage from failure to provide the recommended maintenance;
  - Damage caused by improper use of power supply.
- Should this device require maintenance (or replacement at our option) under warranty, please deliver the original package to OPTIMA HOME SCALES prepaid. Please return the store receipt (with the retail purchase date) and a note with reasons to return on it as well.

**OPTIMA HOME SCALES**  
PO BOX 1526 CUMMING GA 30028 UNITED STATES  
P: 888-688-4833  
Website: [www.optimahomescales.com](http://www.optimahomescales.com)

## ♥ FCC Regulations

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.